Canon

ENGLISH

CDI-E103

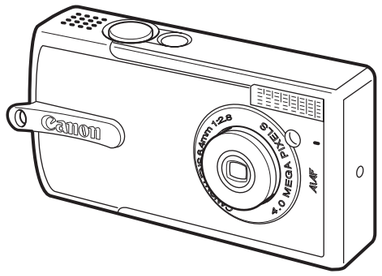

PowerShot SD10 / DIGITAL ELPH / DIGITAL IXUS i

Quick Start Guide

This guide explains the required operations the first time the camera is used, and how to connect to a computer. For usage precautions and detailed instructions, please refer to the manuals listed below.

CDI-E103-010 XXXXXX © CANON INC. PRINTED IN JAPAN

Do not connect the camera to the computer before the software is installed.

Camera

Camera User Guide
Handling precautions and detailed operations for the camera

Computers and Software

Software Starter Guide
Basic software operations

ZoomBrowser EX Software User Guide (Windows®)

ImageBrowser Software User Guide (Macintosh)

The PDF format manuals contain detailed software operations, and are available on the Canon website. Please download them from the following URL:
http://web.canon.jp/Imaging/information-e.html

Printers

Direct Printer User Guide
Detailed printer operations

1 Preparing the Camera

1. Charge the battery.

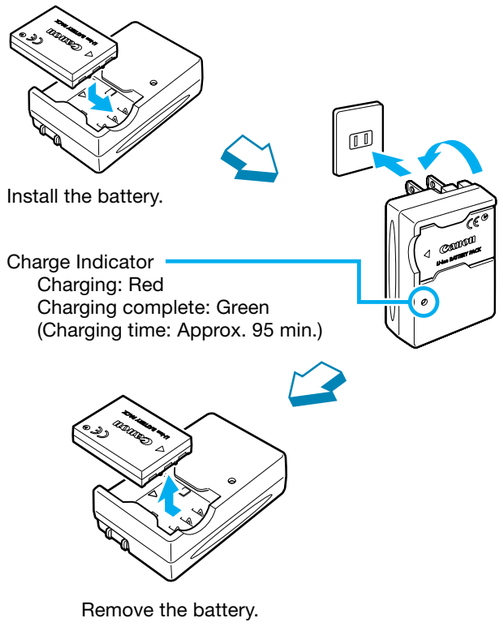

Install the battery.

Charge Indicator
Charging: Red
Charging complete: Green
(Charging time: Approx. 95 min.)

Remove the battery.

2. Install the battery.

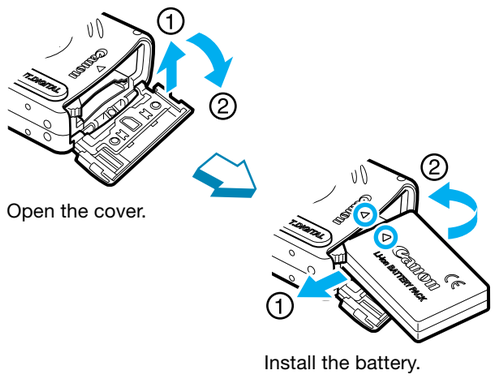

Open the cover.

Install the battery.

3. Install the SD card.

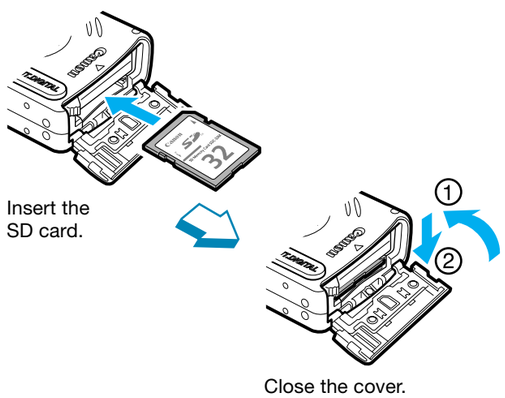

Insert the SD card.

Close the cover.

2 Shooting

1. Slide the mode switch to 📷 (Shooting) and press the On/Off button until the camera powers on.

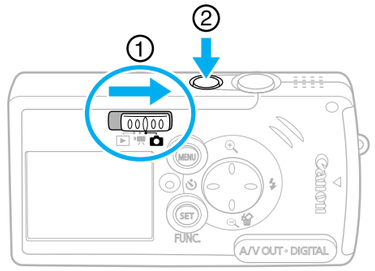

The first time you use the camera, set the date and time. See “Set the Date and Time” below.

2. Focus.

Press the shutter button halfway. The camera beeps twice when the subject is in focus.

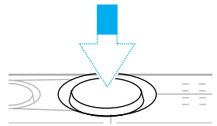

3. Shoot.

Press the shutter button fully. You will hear the sound of the shutter close when the shot is complete.

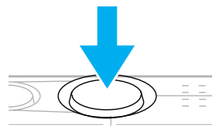

Basic Shooting Operations

For an overview of basic shooting operations, see “Overview” on the reverse side.

Set the Date and Time

Use the ◄ or ► button to select items, and use the ▲ or ▼ button to change the value. To put the settings into effect, press the **SET** button.

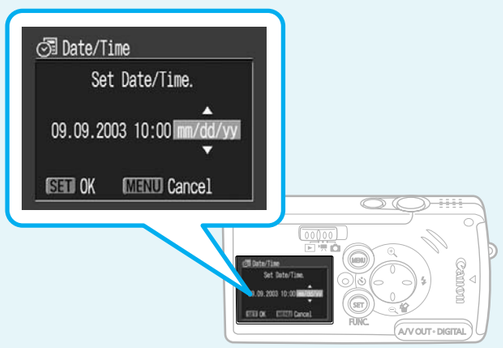

3 Reviewing an Image

1. Slide the mode switch to ▶ (Playback).

2. Use the ◄ or ► button to display an image.

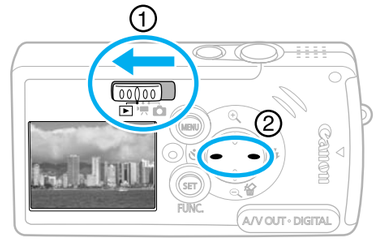

4 Erasing an Image

1. Use the ◄ or ► button to display an image.

2. Press the 🗑 button.

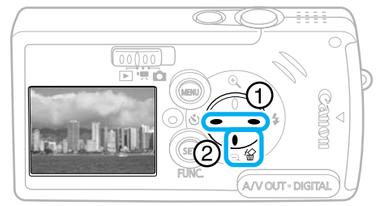

3. Check that [Erase] is selected and press the SET button.

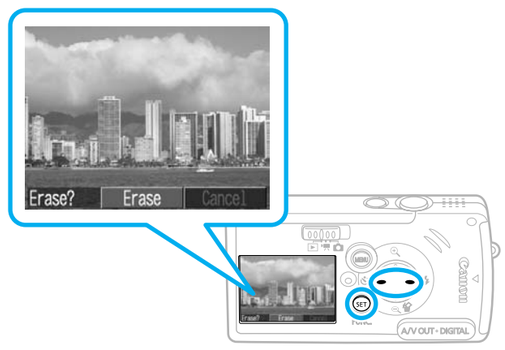

To exit instead of erasing, select [Cancel] using the ◄ or ► button and press the **SET** button.

Please note that erased images cannot be recovered. Exercise caution before erasing a file.

Continued on the reverse side.

5 Connecting to a Computer

Do not connect the camera to the computer before the software is installed.

List of Things to Prepare

- Camera and computer
- Canon Digital Camera Solution Disk
- USB cable (use the cable provided with the camera)

1. Place the Canon Digital Camera Solution Disk in the computer's CD-ROM drive.

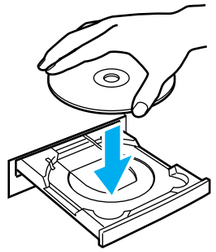

2. Install the software from the disk.

For details on software installation, see the *Software Starter Guide*.

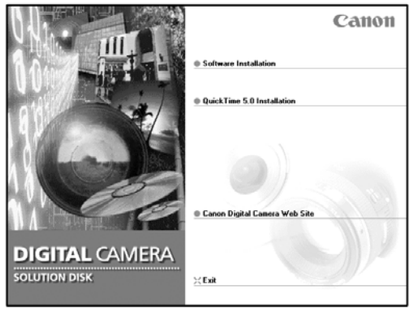

3. Remove the disk from the CD-ROM drive when the installation is complete.

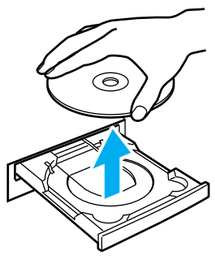

4. Connect the camera to the computer using the USB cable.

Computer

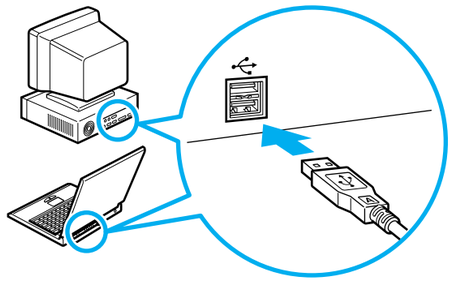

Camera

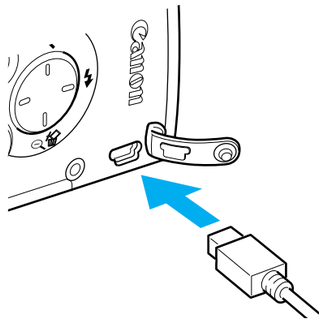

5. Slide the mode switch to ▶ (Playback) and turn on the camera's power.

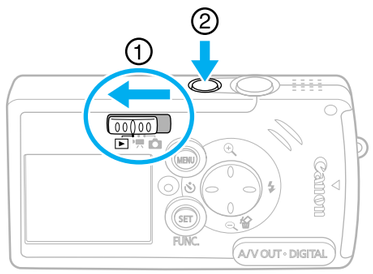

For further instructions, see the *Software Starter Guide*.

Windows

Downloading Images to the Computer

Macintosh

Starting ImageBrowser →
Downloading Images to the Computer

Overview

Mode Switch

Shooting:
Slide the mode switch to 📷.

Movie:
Slide the mode switch to 🎥.

Playback:
Slide the mode switch to ▶.

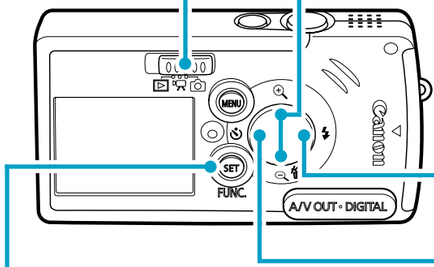

Digital Zoom

Images can be magnified up to approximately 5.7x.

Press this button for a telephoto shot.
The subject becomes larger.

Press this button for a wide-angle shot.
The subject becomes smaller.

Flash*

Each press of the ϟ button cycles between the following settings.

- **: Auto**
- **: Auto with Red-Eye Reduction**
  Prevents the light of the flash from reflecting back from the eyes and making them appear red.
- **: Flash On**
- **: Flash Off**
- **: Slow Synchro**
  The flash timing is adjusted to a slow shutter speed, allowing you to shoot night sceneries.

Shooting Modes

Press the **SET/FUNC.** button once.
Select a shooting mode using the ◂ or ▸ button.

- **: Auto**
  Lets the camera select settings.
- **: Manual**
  Lets you set settings such as the exposure, the white balance and the photo effect.
- **: Long Shutter**
  Lets you shoot images with a slow shutter speed.
- **: Macro**
  Lets you shoot from a distance of 3 cm (1.2 in.) from the front of the lens to the subject. The recordable area for close-ups is 2.4 x 1.8 cm (0.94 x 0.71 in.).
- **: Stitch Assist**
  Lets you shoot overlapping images that can be merged into one panoramic image.

Continuous Shooting, Self-timer*

Each press of the ⏲ button cycles between the following settings.

- **: Single Shot**
- **: Continuous Shooting**
- **: Self-timer**

* Some settings are not available in certain shooting modes.

Some modes have other functions available, see "Functions Available in Each Shooting Mode" at the end of the *Camera User Guide*.